

simalube quick instruction guide to installation, removal, and disposal


Define installation type, lubricant, lubricator size, dispensing time, and accessories




Direct installation



Indirect installation

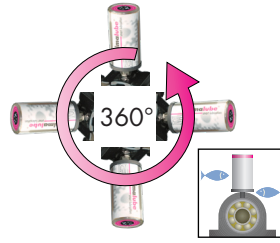

simalube lubricators can be installed in all positions, even underwater.

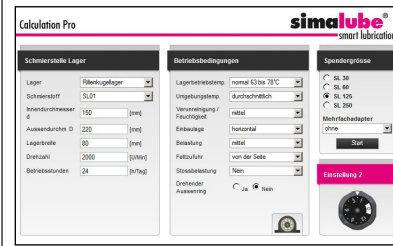

Use "Calculation Pro" to choose correct lubricant, dispensing time, and lubricator size. ("Calculation Pro" is available at www.simatec.com, in the App Store, and in the Android Market.)



Prepare lubrication point




Clean lubrication point



Remove connector nipple




Screw in reducing nipple (if necessary, seal lubrication point)

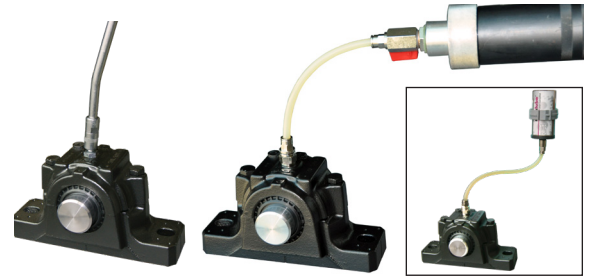

Lubricate the grease lines with a grease gun (fill tubes completely)

Install and activate simalube

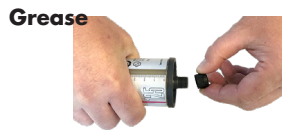

Cut off plug from lubricator or remove black plug



Activate dispensing time with 3 mm Allen key



Write in activation date



Screw in lubricator



Regularly check simalube

Dispose of simalube correctly



Either refill or dispose of empty lubricators



a) Remove cover disk



b) Remove gas generator with a socket wrench (SW21 mm)



Dispose of intact gas generator in battery recycling and empty housing in plastic recycling. (Warning: dispose of leftover grease separately)